

Sewing Pattern — Dress 4322

Recommendations on fabric: natural or mixed dress fabric

You will also need: 1 button; blind zipper; interfacing


If the pattern has double contour the seam allowances are included.

If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out and cutting details.

Seam allowance: on hem — 3 cm, all other seams - 1 cm.

Attention! First of all please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need. Don't forget to count pair parts and symmetrical parts.

When sewing the garment, pay attention to notches, they must coincide.

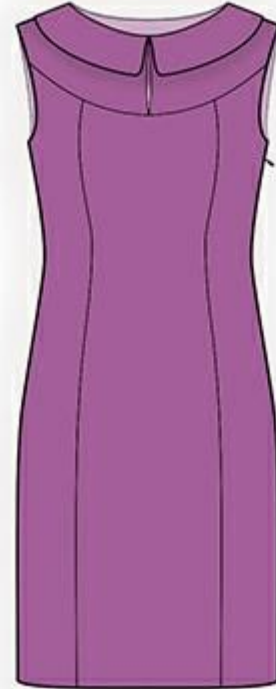

CUTTING:

Main fabric:

1. Center back— 2 details
2. Side back— 2 details
3. Center front — 1 detail
4. Side front— 2 details
5. Front yoke — 4 details
6. Back yoke — 2 details
3. Collar – 2 details

INSTRUCTIONS:

1. Apply interfacing to upper collar.
2. Sew princess edges of front and of back. Finish and press the seam towards center.
3. Apply interfacing to vent from the wrong side of both back details. Mark center seam line (vent fold-line) on right side. Serge center seam allowance together with edge of vent. Sew center edge of back up to vent's corner. Slash away corner of vent seam allowance. Press seam allowance of center seam and vent onto left side. Press right side of the vent at 1 cm onto wrong side and topstitch. Topstitch vent seam allowances on top with machine stitch.
4. Fold collars right sides together and overstitch. Turn collar right side out and press.
5. Overstitch loop buttonhole. Sew shoulder seams of outer and inner yokes. Press apart the seam. Fold inner and outer yokes right sides together. Insert collar between them. Overstitch yokes on center edge and neckline, inserting loop buttonhole. Turn yokes right side out and press. Stitch yokes to front and back. Finish seams and press them downwards.

6. Cut a bias tape of 4 cm wide and as long as the armhole + 3 cm. Fold bias tape in half lengthwise wrong sides together and press. Fold the bias tape with edge of the armhole from the right side and overstitch. Turn bias tape onto wrong side, slash seams and topstitch along the fold onto main detail. Press seam.
7. Sew right side edge. Finish seam and press it towards back part. Finish seam allowances of left side seam and sew section under armhole and from the notch up to hem. Press apart the seam. Sew in zipper.
8. Serge hem of the dress, turn inside and topstitch.
9. Sew on the button.

TECHNICAL DRAWING:

