

Quilted Vest - Sewing Pattern #4854

Recommendations on fabric: quilted jacket fabrics made from natural or blended fibers in contrasting or coordinating colors.


Seam allowances: all seams 1 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

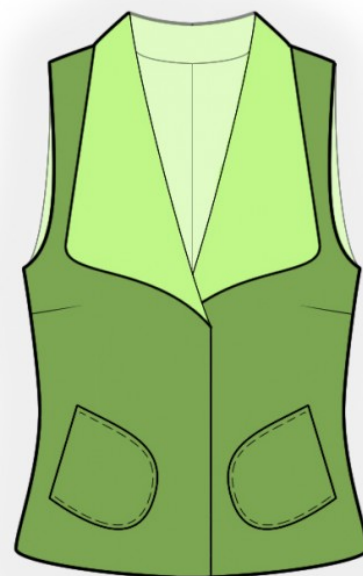

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Back - cut 2
2. Front - cut 2
3. Pocket - cut 4

Main fabric 1:

1. Back - cut 2
2. Front - cut 2

INSTRUCTIONS:

1. Stitch the center seam of the outer back, press the seam apart.
2. Sew darts on front, press bulk towards top.
3. Sew shoulder and side seams, press the seam apart. Sew collar seam, press the seam apart. Clip the seam allowance at the shoulder seam and sew collar into neckline.
4. Finish the inner side of the vest in the same way, leaving an opening in left side seam.
5. Pin pockets together right sides together and sew around all edges, leaving an opening. Clip seam allowances, trim away corners. Turn right side out through the opening. Sew the opening closed by hand. Topstitch pocket according to the notch onto right side.
6. Place the outer and inner vests right sides together and stitch along the front edges, collar and lower edge. Turn right side out through the opening in the side seam. Sew armhole in two steps: first sew the front armhole, then sew the back armhole. Sew the turning opening in the side seam closed.

TECHNICAL DRAWING:

