

Pants With Elastic Waistband - Sewing Pattern #2222

Recommendations on fabric: natural/mixed suiting fabrics.

You will also need: lining; fusible interfacing; elastic tape.


Seam allowances: all seams 1 cm, seam allowance along the hem - 4 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

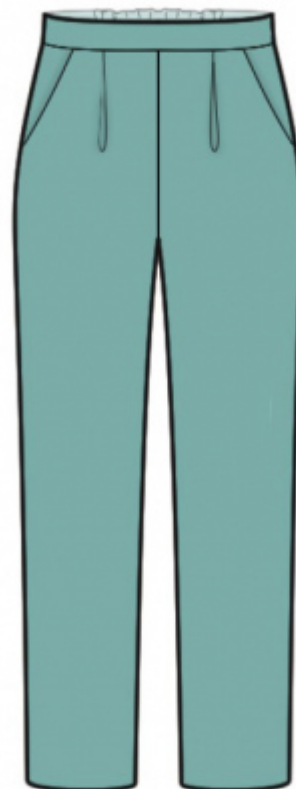

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Back half - cut 2
2. Front half - cut 2
3. Back belt - cut 1
4. Front belt - cut 1
5. Side - cut 2

Lining:

1. Pocket bag – cut 2

Fusible interfacing:

1. Back belt – cut 1
2. Front belt – cut 1

INSTRUCTIONS:

1. Apply fusible interfacing. Also apply fusible interfacing to pocket openings on front halves.
2. Pin pocket bag onto front half and sew pocket opening. Turn pocket bag onto the wrong side, topstitch seam allowances onto pocket bag at 0.1 cm and press.
3. Pin front half onto side according to markings. Sew pocket bag to side, serge. Make and baste pleats on front halves according to markings (fold bulk towards side edge). Baste pocket bag to front half along the upper and side edges.
4. Sew center seam on back halves, press towards left and serge. Sew center seam on front halves, press towards left and serge.
5. Sew side seams, seam allowances press towards back and serge. Sew the inside leg edges, seam allowances press towards back and serge.
6. Sew belts into a ring, press seam apart. Press belt in half lengthwise right side out. Mark the lines for casing on the back and topstitch along the lines. Insert elastic band into the belt, slipstitch according to markings. Sew belt to the pants, serge.
7. Serge hem of pants, press onto wrong side and topstitch or hem as desired.

TECHNICAL DRAWING:

