

Jacket With Trimming Along Center Front Edge - Sewing Pattern #2469

Recommendations on fabric: natural/mixed suiting fabrics in contrasting or matching colours.

You will also need: fusible interfacing; shoulder pads; hooks and eyes.


Seam allowances: all seams 1 cm. Seam allowance for hem of front, back and sleeve - 3.0 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

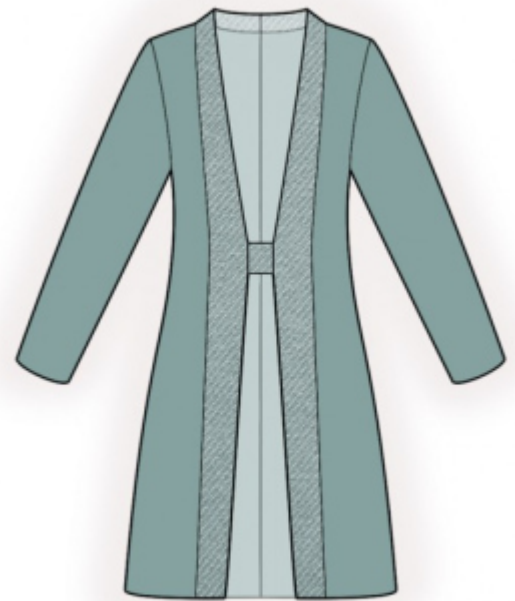

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Back - cut 2
2. Side front - cut 2
3. Sleeve - cut 2

Main fabric 1:

1. Center front – cut 4
2. Strap – cut 1

Fusible interfacing:

1. Center front – cut 2
2. Strap – cut 1

INSTRUCTIONS:

1. Apply fusible interfacing. Apply additional tape of fusible interfacing along front neckline.
2. Sew dart on back. Press bulk towards center. Sew, serge and press apart center back seam.
3. Sew shoulder and side seams. Serge seams and press towards back.
4. Fold the strap along the marked line, right sides together, and sew the lower edge and the right edge. Trim seam allowances, turn right side out and press.
5. Sew center edge of one-piece collar. Press seam apart. Pin center fronts together, right sides together, insert the raw edge of the strap (on the left side), and sew center front, collar and the lower corner. Clip seam allowances, turn right side out and press.
6. Sew center front to side front, sewing the one-piece collar into the back neckline at the same time. Serge and press towards the side piece.
7. Sew sleeve seam. Serge and press towards back. Sew sleeves into armholes matching notches, adjusting ease along upper side of sleeve cap. Sew shoulder pads.
8. Serge the seam allowances for hem of garment and hem of sleeve, fold under onto wrong side and topstitch.
9. Sew hooks onto strap. Sew on button loops onto center front.

TECHNICAL DRAWING:

