

Recommendations on fabric: natural or faux fur.

You will also need: fusible interfacing, stiff lining.

Seam allowances: all seams – 0.5 cm, on lining pieces - 1.0 cm..

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.

- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:


Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.



CUTTING:


Fur / fusible interfacing:

1. Side - cut 1 (A)
2. Bottom - cut 1 (B)

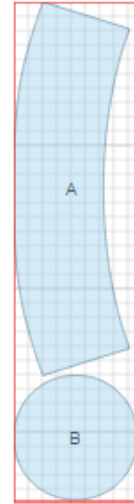

Lining:

1. Side - cut 2 (A)
2. Bottom - cut 2 (B)
3. Upper side facing - cut 1 (C)
4. Lower side facing - cut 1 (D)
5. Bottom facing - cut 1 (E)

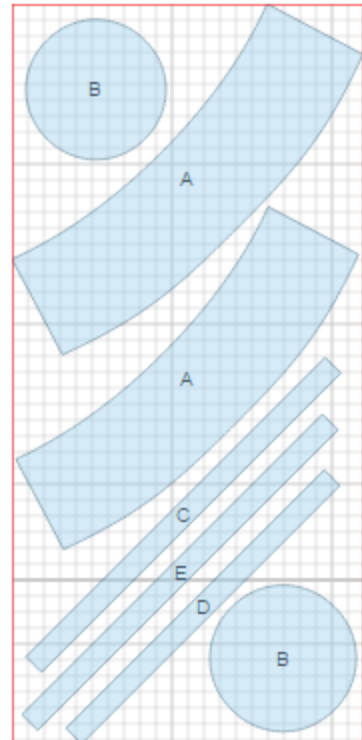

INSTRUCTIONS:

1. Place fusible interfacing pieces on leather side of corresponding fur pieces and quilt. Start stitch at 1.0 cm from edge from top down. Make stitches at 2 cm from each other. Catch only a part of inner side of hide and slightly pull the thread.
2. Place ends of side right sides together and sew them with close loop-stitch. Hammer the seam. Lay ends of fusible interfacing over each other and sew together.
3. Turn one edge of upper side facing under, at 0.5 cm. Place facing and upper edge of side right sides together and sew the same way as fur pieces, with close loop-stitch. Finish lower edge of side the same way.
4. Turn hat edge under and sew to lining; seam must go along facing at 0.5 cm from connecting seam. Turn lower edge of upper side under and sew it to lining.
5. Sew bottom lining the same way as to side slightly easing it in. Insert bottom into side, align and tack from inner side. Sew upper side and bottom facings together with close stitches from inner side. Sew facings to side interfacing.
6. Sew seam of lining side piece. Press seam open to full touch. Sew bottom to side. Set lining into hat and align. Turn lining under and slip stitch. Slip-stitch lining to bias tape at 0.3 cm from seam.

TECHNICAL DRAWING:

