

## Sewing Pattern — Dress 4213

Recommendations on fabric: fabric suitable for dresses.

You will also need: fusing; blind zipper.


If the pattern has double contour the seam allowances are included.

Seam allowances are NOT included by default and need to be added when laying out and cutting details if your pattern has single contour.

Seam allowance: all seams -1 cm; hem of the dress – 2.0 cm .

Attention! First of all please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need. Don't forget to count pair parts and symmetrical parts.

When sewing the garment, pay attention to notches, they must coincide.

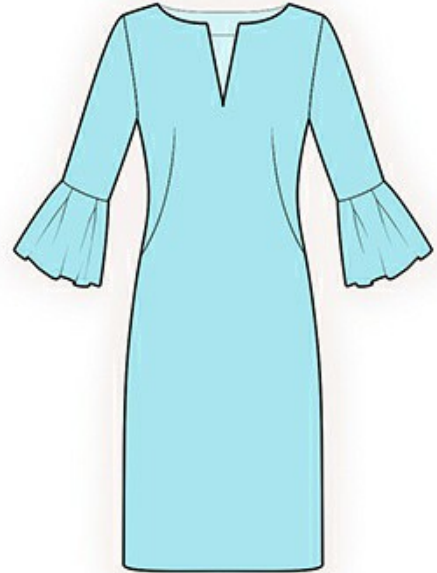

### **CUTTING:**

Fabric:

1. Back part - 2 details
2. Front part - 1 detail
3. Back part facing— 2 details
4. Front part facing— 1 detail
5. Sleeve - 2 details
6. Cuff – 2 details

### **INSTRUCTIONS:**

1. Sew darts on details of back part. Press darts towards center of back part. Sew darts on details of front part. Cut off the depth of darts. Press darts apart.
2. Apply fusing to wrong side of the vent on both details of lower of back part. Mark center seam line (vent fold line) on the right side. Serge separately center edges of back part and seam allowances of the vent. Sew center edge of back part from marker up to vent corner. Slash away vent seam allowance corner. Press seam allowances of the center seam apart. Press right side of the vent at 1 cm onto wrong side and topstitch. Press seam allowances of the vent to lefty side seam and topstitch with machine stitch. Sew in zipper.
3. Sew shoulder seams and side edges, press seam onto back part and serge.
4. Apply fusing to facings. Sew shoulder edge of the facings. Serge and press the seam to front part. Serge outer edge of the facings. Fold dress with facing right sides together, leveling neckline edges. Leaving 5 mm to zipper edges, turn the facing away and pin it to top edge of the dress.

Turn seam allowances along zipper onto right side of the dress and pin to neckline edge on top of the facing. Overstitch neckline edge. Slash seam on rounded parts, cut the seam allowance in corner, leaving 2-3 mm to the stitch. Turn details out and press. Topstitch seam allowances onto the facing. Tack facing to zipper tape.

5. Sew edge of sleeve. Press and serge the seam. Sew the cuff into ring. Press apart the seam. Turn cuff out, fold in half and fix along top edge. Make and stitch up 4 counter pleats at 3 cm according to markers. Stitch cuff to the sleeve. Serge the seam and press it upwards. Sew the sleeve into armhole, leveling notches. Press and serge the seam.

6. Serge seam allowance of the dress hem, press onto wrong side and undersew with invisible stitches.

### **TECHNICAL DRAWING:**

