

Dress With Peplums - Sewing Pattern #2261

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: dress zipper, fusible interfacing.


Seam allowances: Все швы – 1.0 cm; seam allowance for hem – 2.0 cm; lower seam allowances of peplums – 1.5 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

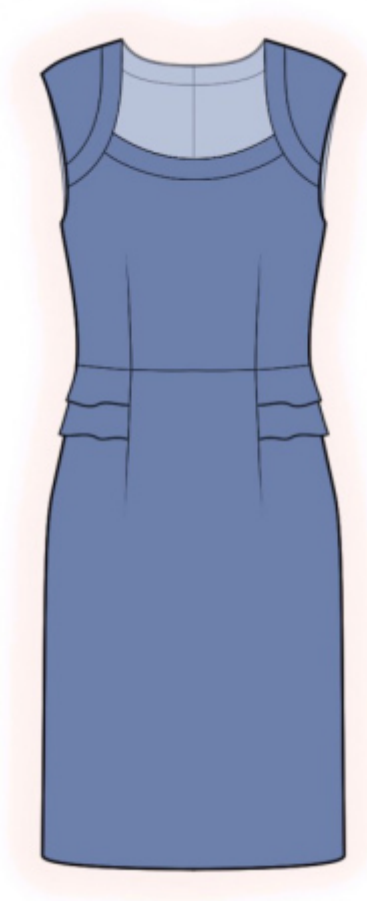

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Upper back - cut 2
2. Upper front - cut 1 on fold
3. Lower back - cut 2
4. Lower front - cut 1 on fold
5. Neckline facing - cut 4
6. Decollette facing - cut 2
7. Upper peplum - cut 2

- 8. Lower peplum – cut 2
- 9. Front sleeve – cut 2

Fusible interfacing:

- 1. Neckline facing – cut 2
- 2. Decollette facing – cut 1

INSTRUCTIONS:

1. Apply fusible interfacing.
2. Serge lower edge of inner facing. Pin together facings decollette right sides together and sew upper edge. Clip seam allowances, turn right side out and press. Sew outer facing to upper front, press seam allowance towards facing. Pin the seam allowance of inner facing to the seam of outer facing and stitch-in-the-ditch .
3. Sew darts on upper back. Press bulk towards center. Sew front sleeve to upper back along shoulder edge. Serge seams and press towards back.
4. Sew darts on upper fronts. Trim bulk with serger and press towards center.
5. Pin neckline facings together by two, right sides together and sew the neckline, inserting upper front. Clip seam allowances, facings straighten and press.
6. Sew neckline facing to sleeve and to back. Clip into seam allowance, serge and press from neckline.
7. Cut (or take ready) bias tape, its width should equal 4 cm and length should equal the length of armhole + 6 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape onto armhole edge from the right side, leaving loose ends, and sew. Fold bias tape onto wrong side, clip into seam allowances and topstitch onto main piece along the seam. Press seam.
8. Sew side edges of upper parts. Serge seams and press towards back.
9. Serge lower edges of peplums, turn inside and topstitch. Pin upper peplum onto lower peplum and baste together along the upper edge and side edges.
10. Sew side seams of lower parts. Serge seams and press towards back.
11. Slash darts on lower fronts and on lower backs, stopping at 3-4 cm from the dart corner. Sew darts, inserting peplums. Serge dart edges, gradually coming to naught.
12. Sew upper part of dress to lower part of dress. Press seam allowance towards top and serge.
13. Serge center back edges separately. Sew center back seam from notch for zipper down to notch for slit.

Press the seam apart. Sew a fastening stitch along the slit at 0.2 cm from the edge. Sew in zipper.

14. Seam allowance for hem serge, press inside and topstitch.

TECHNICAL DRAWING:

