

## Dress With Wide Sleeve - Sewing Pattern #2285

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: fusible interfacing; 3 buttons.


Seam allowances: all seams 1 cm. Seam allowance along the lower edge of the garment – 1.5 cm.

### Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

### Note on length of fabric:

*Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.*

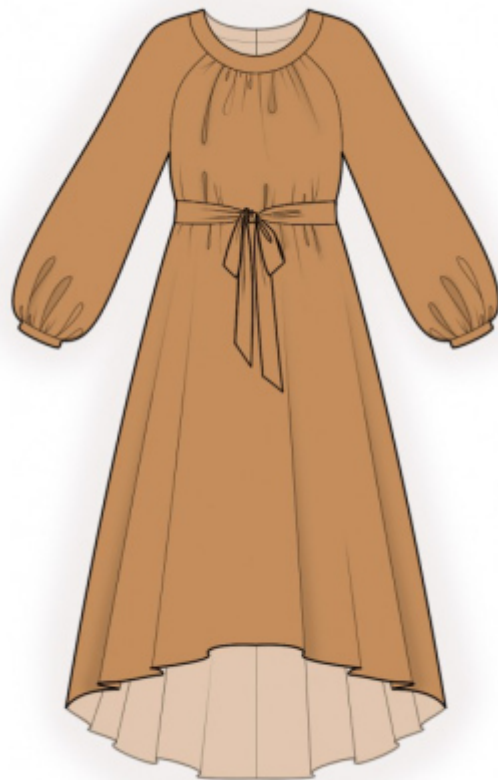

## CUTTING:

### Note on cutting:

*On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.*

*When sewing the garment, pay attention to notches, they must match up.*

Main fabric:

1. Back - cut 2
2. Front - cut 1 on fold
3. Sleeve - cut 2
4. Cuff - cut 2
5. Neckline facing — cut 2
6. Belt - cut 1

Fusible interfacing:

1. Cuff – cut 2
2. Neckline facing – cut 1

## INSTRUCTIONS:

1. Apply fusible interfacing.
2. Serge the center back edges separately. Sew center back seam from the marking for slit down to the lower edge. Press the seam apart. Sew a decorative stitch along the slit at 0.1-0.2 cm from the edge.
3. Sew a gathering stitch along upper edge of front and gather fullness.
4. Cut slit on sleeve along the marked line. Cut bias tape from main fabric (or take ready), its width should equal 4 cm and length should equal two lengths of slit +4 cm. Fold bias tape in half lengthwise and press. Press outer seam allowances towards center. Sew bias tape to slit of sleeve (pin bias tape to slit edge from the right side and sew, fold bias tape onto wrong side and topstitch onto garment along fold line).
5. Sew sleeves to back, press towards the back and serge. Sew sleeves to front, press towards front and serge.
6. Sew side seams processing the sleeve seam at the same time, serge and press.
7. Cut (or take ready) bias tape, its width should equal 2.5 cm and its length should equal 5 cm for loop buttonhole. Fold tape in half lengthwise right sides together and stitch at 0.3 cm from fold. Cut away seam allowances close to seam, turn tape right side out and straighten the rolled piece. Adjust length of the loop.
8. Pin neckline facings together, right sides together, and sew along neckline edge and center back seam, inserting the loop buttonhole. Clip into curves, turn right side out and press. Sew the outer facing into neckline, press seam allowance towards facing. Fold under the seam allowance of the inner side inside at 1 cm and topstitch into seam of.
9. Pin cuffs together, right sides together and sew side edges. Start and stop stitching exactly at the marked line of the cuff seam. Turn the piece right side out, press. Sew a gathering stitch along lower edge of sleeve and gather fullness. Sew the outer part of the cuff to the sleeve, fold inside the inner side of the cuff, and topstitch into the seam of the outer cuff cuffs.
10. Serge the lower edge of garment. Press onto wrong side and topstitch.
11. Make buttonholes on cuffs, sew on buttons. Sew on button onto the left side of facing.
12. Fold belt in half lengthwise right side down and sew along the edges, leaving an opening for turning. Turn belt right side out and press. Sew the opening closed.

**TECHNICAL DRAWING:**

