

Blouse With Flounce - Выкройка #2307

Recommendations on fabric: natural/mixed fabrics suitable for blouses.

You will also need: 7 buttons, fusible interfacing.

Seam allowances: seam allowance for hem of garment - 2.0 cm, other seams - 1.0 cm.


О припусках на швы::

- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.

- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:

Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

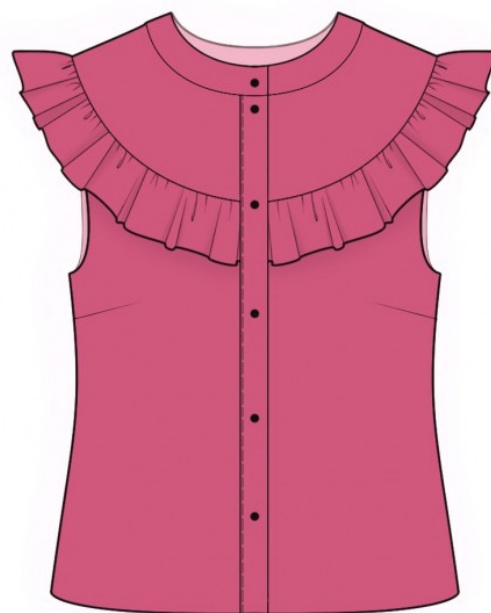

РАСКРОЙ:

Обратите внимание при раскрое:

Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроются со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.

При стачивании деталей, обращайтесь внимание на надсечки, они должны совпадать.

Main fabric:

1. Front - cut 2
2. Back - cut 1 on fold
3. Flounce - cut 2
4. Front yoke - cut 2
5. Back yoke - cut 1
6. Back neck facing - cut 2
7. Front neck facing - cut 4

Fusible interfacing:

1. Front neck facing - cut 2
2. Back neck facing - cut 1
3. Placket - cut 2

Инструкции:

1. Apply fusible interfacing.
2. Sew front darts. Press bulk towards top.
3. Sew darts on back. Press bulk towards center.
4. Sew shoulder edges of front and back. Serge seams and press towards back.
5. Sew shoulder seams on yokes. Serge seams and press towards back.
6. Serge the outer edge of flounce. Fold inside the seam allowance and topstitch. You may also finish the edge with bias tape or baby hem, in this case trim away the seam allowance. Sew a gathering stitch along the inner edge of flounce and gather fullness.
7. Sew yoke to front and to back, inserting flounce. Serge and press onto yoke.
8. Cut (or take ready) bias tape , its width should equal 4 cm and length should equal the length of armhole + 4 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape to armhole edge from the right side and sew. Fold bias tape onto wrong side, clip into seam allowances and topstitch onto main piece along the fold. Press seam.
9. Sew side edges of front and back. Serge seams and press towards back.
10. Sew outer edge of placket to front, press seam allowances onto placket. Fold inner edge of placket inside and stitch-in-the-ditch along seam of outer placket.
11. Sew the shoulder seams of the neckline facings. Press the seam apart. Pin the facings together, right sides together and sew the neckline and center edges. Trim seam allowances, turn right side out and press. Sew outer neckline facings to front yoke and to back yoke. Press seam allowance towards facing. Fold under the edge of inner facings and topstitch into seam of.
12. Serge the lower edge of garment, press onto wrong side and topstitch.
13. Make buttonholes and sew on buttons.

Технический рисунок:

