

Dress With Asymmetric Buttons - Sewing Pattern #2935

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: fusible interfacing; 5 buttons; dress zipper; shoulder pads; lining.


Seam allowances: Seam allowance for hem of garment - 2 cm; other seams - 1 cm.

Note on seam allowances:

- If the pattern has double contour the seam allowances are included. They are 1 cm unless specified otherwise.
- If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out the pattern.

Note on length of fabric:

Attention! The amount of fabric needed for your pattern is not included. It will depend on the selected pattern size, the width, and design of the fabric you plan to use. First, print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm). Measure how much fabric you will need. Don't forget to account for pieces that need to be cut multiple times and pieces that are cut on the fold.

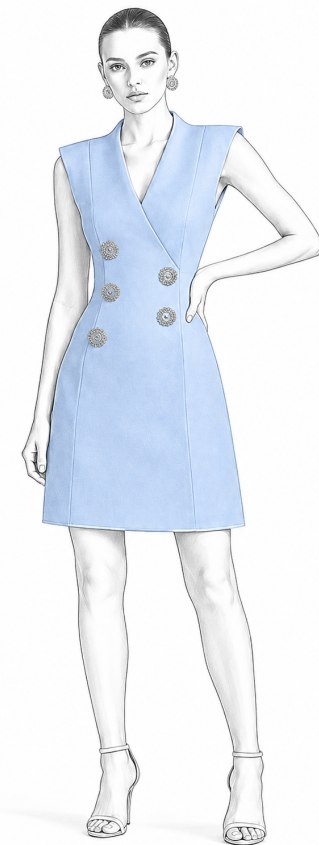

CUTTING:

Note on cutting:

On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as pleats etc. from the pattern onto your fabric.

When sewing the garment, pay attention to notches, they must match up.

Main fabric:

1. Center back - cut 2
2. Side back - cut 2
3. Center front - cut 2
4. Side front - cut 2
5. Back neck facing - cut 2
6. Front neck facing - cut 2

Lining:

1. Back lining – cut 2
2. Center front lining – cut 2
3. Side front lining – cut 2

Fusible interfacing:

1. Back neck facing – cut 2
2. Front neck facing – cut 2

INSTRUCTIONS:

1. Apply fusible interfacing.
2. Stitch the shoulder seams of the center dress pieces. Clip seam allowances and press apart.
3. Stitch the princess seam of the front lining pieces and press the seam allowances. Sew the front lining to the front neckline facing. Press the seam allowance toward the lining.
4. Stitch the dart on the back lining and press the dart intake toward the center. Sew the back lining to the back neckline facing. Press the seam allowance toward the lining. Sew side and shoulder seams of lining and of facings. Clip the seam allowances along the curves and press them open. Serge lower edge of lining.
5. Place the facings on the front and back, right sides together, and stitch the neckline. Clip seam allowances, turn right side out and press.
6. Put right front onto left front and baste together along princess seams.
7. Stitch the shoulder seams of the side dress pieces. Press the seam apart.
8. Stitch the princess seams of the front and back in one continuous seam, serge seams and press towards center.
9. Sew side seams. Press seams towards back and serge.
10. Sew lining to armhole in two steps: first sew the front armhole, then sew the back armhole. Clip seam allowances, turn right side out and press.
11. Serge center back edges separately, folding the lining aside. Sew center back seam from notch for zipper to bottom, press the seam apart. Sew in zipper. Sew the back neckline facing and the lining to the zipper tape by hand.
12. Sew on shoulder pads.

13. Turn hem under inside at 1 cm, then again at 1 cm and topstitch.
14. Sew decorative buttons according to markings.

TECHNICAL DRAWING:

