

Sewing Pattern — Dress 4347

Recommendations on fabric: fabric suitable for dresses

You will also need: invisible zipper, fusible interfacing


If the pattern has a double line around it, the seam allowances are included.

Note: By default, seam allowances are NOT included (single line) and will need to be added when laying out and cutting details.

SEAM ALLOWANCE: all seams - 1 cm; on hem of the dress – 2 cm

Attention! First of all please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need. Don't forget to take into account pieces to be duplicated or cut on a fold.

When sewing the garment, pay attention to notches, they must match up with corresponding pieces.

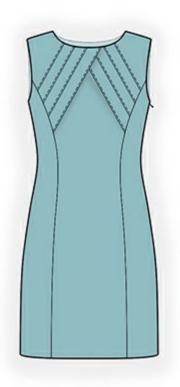

CUTTING:

(On the pattern pieces, "beam" means straight of grain. Lay out your pieces accordingly. Some pieces will be cut on the fold. This is noted on the pattern piece. Mark all notches and other design features such as darts, pleats etc. from the pattern onto your fabric.)

Main fabric:

- 1. Central back 2 details
- 2. Side back 2 details
- 3. Side front 2 details
- 4. Central front 1 detail
- 5. Front facing 1 detail
- 6. Back facing 1 detail
- 7. Front yoke 2 details
- 8. Inset 1 2 details
- 9. Inset 2 2 details
- 10. Inset 3 2 details

Interfacing:

- 1. Facing of back part 1 detail
- 2. Facing of front part 1 detail



INSTRUCTIONS:

1. Apply interfacing to back facing and front facing.

2. Sew center edge of back. Serge seam and press to left side. Sew princess seams on back. Serge and press the seam towards center.

3. Fold inset 3 in half lengthwise wrong sides together and stitch at 0.2 cm off the fold. Put inset 3 on left part of front, level edges. On top put inset 2 with its right sides down and sew details together. Serge seam. Turn inset 2 upwards and topstitch at 0.2 cm off the connecting seam. Put inset 1 right side down onto inset 2. Sew and serge seam . Turn inset 1 upwards and put decorative stitch at 0.2 cm off the connecting. The same way sew right side of front. Stitch yoke of front part. Serge seam, put decorative stitch.

4. Sew princess edges of front. Serge seam allowances and press them to side edge.

5. Serge separately side edges, sew them from notch downwards, press seam allowances apart. Sew in zipper. Sew right side edge, press seam onto back part and serge. Sew shoulder seams. Press apart the seam.

6. Sew shoulder and right side edges of the facings. Press apart the seam. Serge left side and outer edge facings. Put dress and facing right sides together and overstitch the neckline. Slash seam allowances on rounded parts, turn the facing out, straighten and press. Overstitch armhole in two steps: first back part, then front part. Slash seam allowances on rounded parts, turn out, press. Fasten the facing to the garment on right side and center seam allowances. Fasten the facing to zipper tape.

7. Serge hem of the dress. Turn seam allowances inside and topstitch.

TECHNICAL DRAWING:

