

Sewing Pattern — Dress 4208

Recommendations on fabric: fabric suitable for dresses.

You will also need: blind zipper; fusing; lining.


If the pattern has double contour the seam allowances are included.

If the pattern has single contour, the seam allowances are NOT included and need to be added when laying out and cutting details.

Seam allowance: on hem of the dress – 2.0 cm, other seams - 1 cm.

Attention! First of all please print all the paper patterns and lay them out at the width of fabric you plan to use (usually from 90 to 150 cm) to see how much fabric you will need. Don't forget to count pair parts and symmetrical parts.

When sewing the garment, pay attention to notches, they must coincide.

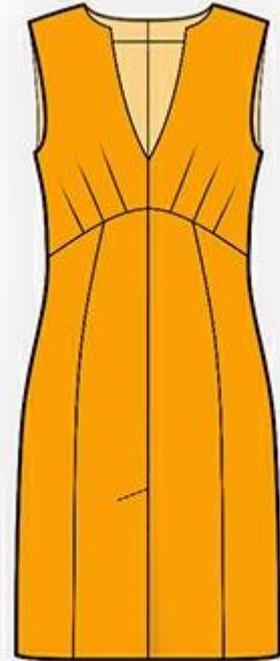

CUTTING:

Main fabric:

1. Central back part - 2 details
2. Side back part - 2 details
3. Side lower front part - 2 details
4. Central lower front part – 2 details
5. Upper front part - 2 details
6. Front part inset - 1 detail
7. Facing of front part - 2 details

Lining:

1. Central back part - 2 details
2. Side back part - 2 details
3. Upper front part - 2 details
4. Front part inset - 1 detail

Fusing: Facing of front part - 2 details, vent seam allowances.

INSTRUCTIONS:

1. Apply fusing to details.
2. Sew darts on details of back part. Press darts towards center detail.
3. Sew relieve seams on back part, press seam allowances towards center and serge.
4. Serge middle edge of back part. Sew middle seam from zipper marker up to hem. Press the seam

apart, pressing a slit for zipper. Sew in zipper.

5. Sew relieve edges of lower front part, press seam allowances towards center and serge. Sew middle edge of lower front part, sewing the vent at the same time. Press seam allowances and vent onto right side, serge.

6. Sew darts on top front part. Press darts towards center detail. Sew middle edge of top front part, press seam allowances apart and serge.

7. Sew middle edge facings of front part, starting the stitch exactly near marked neckline line, press seam allowances apart. Fold the facing with top part and overstretch neckline. Slash seam allowances on rounded parts, turn the facing onto wrong side, press.

8. Fold front part inset with lining and overstretch upper edge. Turn detail onto right side, press, fix on sides. Stitch inset to inner edges of front part facings from marker downwards.

9. Sew top and bottom front part. Serge and press upwards.

10. Sew shoulder and side edges. Serge and press towards back part.

11. Sew darts on lining details, relieve edges of back part, side and shoulder edges similar to main details. Serge central edges of back part, of front part and lower edge. Stitch right part of lining to inner edge of front part facings. Turn the facing of front part onto right side, coincide neckline edges of the garment and lining. Turn lining leaving 5 mm to zipper edges and fix to top edge of the dress. Turn seam allowances on right side of the dress along zipper and fix to neckline edge on top of lining.

Overstretch neckline edge. Slash seam allowances on rounded parts, turn details onto wrong side and press. Turn seam allowances along zipper on wrong side and tack to zipper tape. Sew left part the same way. Sew middle edge of front part lining. Overstretch armhole with lining twice over. Fix lining to garment along the lower edge of front part lining.

12. Serge hem of the dress, press onto wrong side and undersew with invisible stitches.

TECHNICAL DRAWING:

