Dress With Faux Raglan Sleeve - Выкройка #2169

Recommendations on fabric: thick dress fabrics.

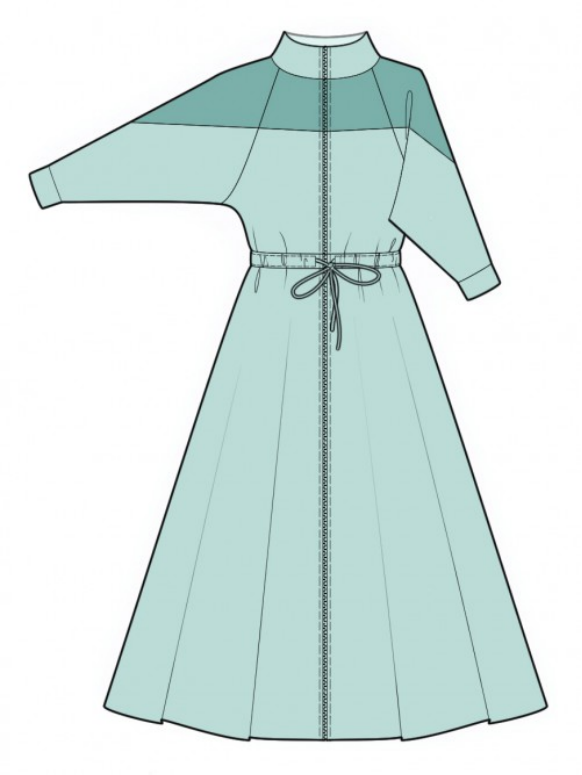

You will also need: separating zipper, fusible interfacing, decorative cord.

Seam allowances: all seams 1 cm; seam allowance along hem of dress - 2 cm.

О припусках на швы::
- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.
- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:
Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

РАСКРОЙ:

Обратите внимание при раскрое:
Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроятся со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.
При стачивании деталей, обращайте внимание на надсечки, они должны совпадать.

Main fabric:
1. Lower back sleeve - cut 2
2. Center back - cut 2
3. Lower back — cut 2
4. Center front - cut 2
5. Lower front — cut 2
6. Lower front sleeve – cut 2
7. Cuff – cut 2

8. Casing – cut 1
9. Pocket side – cut 2
10. Pocket – cut 2
11. Center front facing – cut 2

Main fabric 1:
1. Upper back sleeve – cut 2
2. Upper back – cut 2
3. Upper front sleeve – cut 2
4. Upper front - cut 2

Fusible interfacing:
1. Stand collar – cut 1
2. Cuff – cut 2
3. Center front facing – cut 2
4. Stand collar - cut 2

Инструкции:

1. Apply fusible interfacing.

2. Sew centre back to upper back. Serge and press towards top. Sew together the parts of back sleeve. Serge seams and press towards top. Sew sleeve to back. Serge the seam allowances and press onto sleeve. Sew a decorative stitch along the sleeve seam at 0.5 cm from seam. Sew lower back to back. Serge and press towards top. Sew center back seam. Serge seam and press towards left.

3. Sew center front to upper front. Serge and press towards top. Sew together the parts of front sleeve. Serge seams and press towards top. Sew sleeve to front. Serge the seam allowances and press onto sleeve. Sew a decorative stitch along the sleeve seam at 0.5 cm from seam.

4. Pin pocket onto lower front right sides together and sew pocket opening. Clip seam allowances, fold away pocket onto wrong side and press. Pin lower front at pocket side and sew together edges of pocket bags. Serge and press. Baste pocket in place along the side edge and upper edge.

5. Sew lower front to front. Serge and press towards top.

6. Sew shoulder and side seams, processing the sleeve seam at the same time. Serge seams and press towards back.

7. Sew upper stand collar into neckline. Press the seam apart.

8. Sew shoulder edges of center front facing and of the back neckline facings. Press the seam apart. Serge outer edges center front facings and facings. Sew into neckline inner stand collar. Press the seam apart. Pin

center front facing onto front, adjusting edges, insert zipper and sew along the center front edge and the stand collar edge. Fold the center front facing onto the wrong side and baste together along neckline edge and shoulder edge.

9. Fold under the shorter seam allowances of the casing and topstitch. Fold the longer seam allowances of the casing onto the wrong side and press. Pin the casing onto the waist seam and topstitch with two parallel stitch lines from the right side.

10. Sew cuff into a ring. Press the seam apart. Fold cuff in half lengthwise and press. Sew outer side of cuff to sleeve. Fold under the seam allowance of the inner side inside and stitch-in-the-ditch along seam of outer side.

11. Serge bottom edge of dress, press onto wrong side and topstitch.

12. Slipstitch center front facing to the waist seam. Thread cord into casing.

Технический рисунок:

