Dress With Classical Princess Seams - Выкройка #2185

Recommendations on fabric: natural/mixed fabric suitable for dresses.

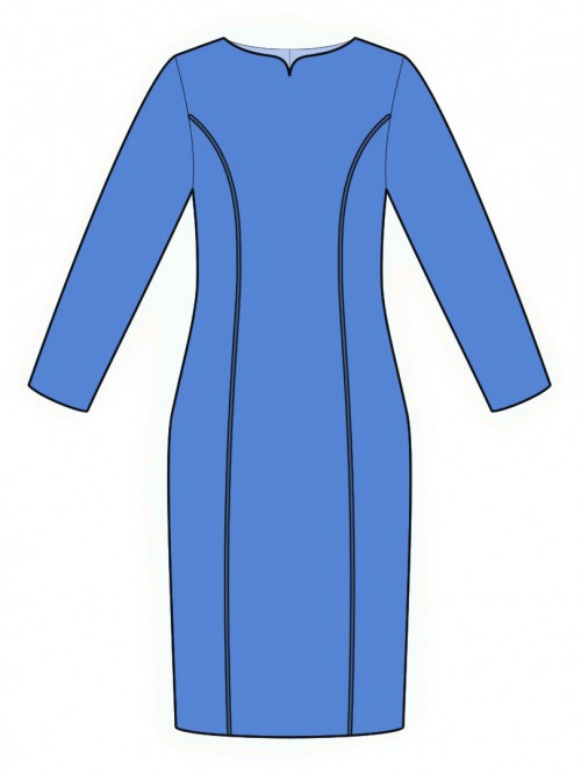

You will also need: decorative piping (approximate length is given on the front pattern piece)fusible interfacing; dress zipper.

Seam allowances: Seam allowance along hem of garment and hem of sleeve – 2.0 cm. Other seams – 1.0 cm

О припусках на швы::
- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.
- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:
Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

РАСКРОЙ:

Обратите внимание при раскрое:
Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроятся со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.
При стачивании деталей, обращайте внимание на надсечки, они должны совпадать.

Main fabric:
1. Center back - cut 2
2. Side back - cut 2
3. Center front - cut 1 on fold
4. Side front - cut 2
5. Sleeve – cut 2
6. Front neck facing - cut 1
7. Back neck facing - cut 2

Fusible interfacing:
1. Front neck facing - cut 1
2. Back neck facing - cut 2

Инструкции:

1. Apply fusible interfacing.

2. Sew side backs to center back, inserting the decorative piping into the seam, press towards center and serge. Serge the center back edges separately, sew them from zipper mark up to slit mark, press the seam apart. Sew in zipper. Sew a fastening stitch along the slit at 0.5 cm from the edge.

3. Serge outer edge of back facing. Pin back facing onto back, right side down and sew neckline. Start and stop stitching exactly at the marked line of the seam. Clip seam allowances. Fold the facing onto wrong side and press.

4. Sew side fronts to front, inserting the decorative piping into the seam, press towards center and serge.

5. Serge outer edge of front facing. Pin front facing onto front, right side down and sew neckline. Clip seam allowances, trim away corner. Fold the facing onto wrong side and press.

6. Sew shoulder seams, inserting Front between Back and Back Facing. Serge seams and press towards back.

7. Sew side seams, press towards the back and serge.

8. Sew sleeve seam. Serge and press towards back. Sew sleeve into armhole according to notches, serge and press.

9. Serge the seam allowance along the hem of garment, press onto wrong side and topstitch.

Технический рисунок:

