Dress With Tulip Skirt And Gathered Sleeve - Выкройка #2218

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: fusible interfacing, dress zipper.

Seam allowances: seam allowance for hem of garment — 2.5 cm, seam allowance along the vent edge – 6 cm, other seams 1 cm.

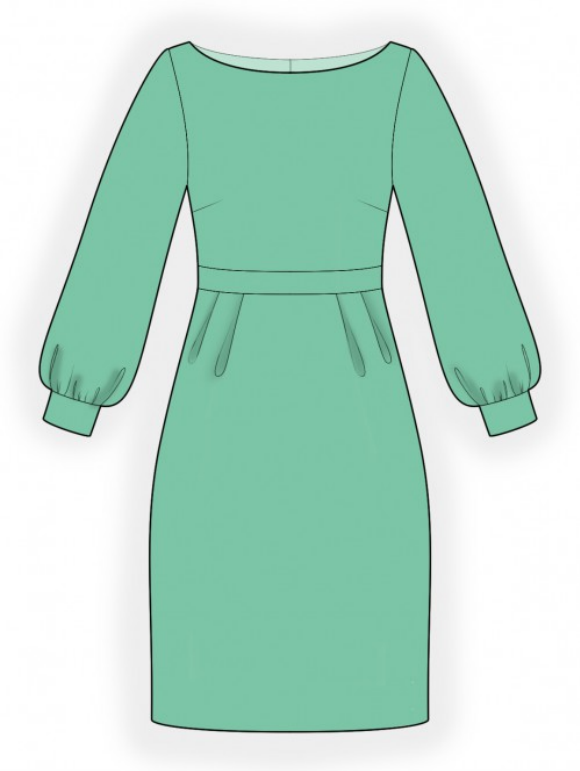

О припусках на швы::
- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.
- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:
Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

РАСКРОЙ:

Обратите внимание при раскрое:
Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроятся со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.
При стачивании деталей, обращайте внимание на надсечки, они должны совпадать.

Main fabric:
1. Upper back – cut 2
2. Back belt — cut 2
3. Lower back — cut 2
4. Upper front — cut 1 on fold
5. Front belt — cut 1
6. Lower front — cut 1 on fold
7. Sleeve — cut 2

8. Cuff — cut 2

Fusible interfacing:
1. Cuff — cut 2

Инструкции:

1. Apply fusible interfacing.

2. Sew darts on upper back and on lower back, press bulk towards center.

3. Sew back belt to upper part, press seam allowances towards belt and serge. Sew lower back to belt, press seam allowances towards belt and serge.

4. Trim away 5 cm along vertical edge of vent on left back. Apply fusible interfacing to vent area on backs from the wrong side. Mark center seam line (vent fold-line) from the right side. Press left part along vent fold, on the right side press onto wrong side only the seam allowance of right side of vent (6 cm). Align pieces along center seam and baste together along upper edge of vent. Serge center back edges separately. Serge seam allowances of vent. Sew center back seam from zipper marker down to vent corner. Clip into seam allowance of vent in corner on right part. Press apart center seam, press seam allowances of the vent and sew them together by machine. Sew in zipper.

5. Sew darts on Upper Front, press bulk towards top. Make and baste pleats on lower front (fold bulk towards center).

6. Sew front belt to upper piece, press seam allowances towards belt and serge. Sew lower front to belt, press seam allowances towards belt and serge.

7. Sew side and shoulder seams, press towards the back and serge.

8. Cut (or take ready) bias tape, its width should equal 4 cm and length should equal the length of neckline + 5 cm. Fold bias tape in half lengthwise right side out and press. Pin bias tape to neckline from the right side and sew. Clip into seam allowances. Fold bias tape onto wrong side and topstitch onto main piece along the fold. Press seam.

9. Sew sleeve seam, press towards the back and serge. Sew a gathering stitch along lower edge and gather fullness. Sew sleeves into armholes matching notches and adjusting ease. Serge and press.

10. Sew cuff into a ring, press the seam apart. Fold cuff in half lengthwise and press right side out. Sew outer side of cuff to sleeve, fold under the seam allowance of the inner side inside and stitch-in-the-ditch along seam of outer side.

11. Serge the lower edge of garment, press onto wrong side and finish with hidden stitches.

Технический рисунок:

