Dress With Wide Sleeve - Выкройка #2285

Recommendations on fabric: natural/mixed fabric suitable for dresses.

You will also need: fusible interfacing; 3 buttons.

Seam allowances: all seams 1 cm. Seam allowance along the lower edge of the garment – 1.5 cm.

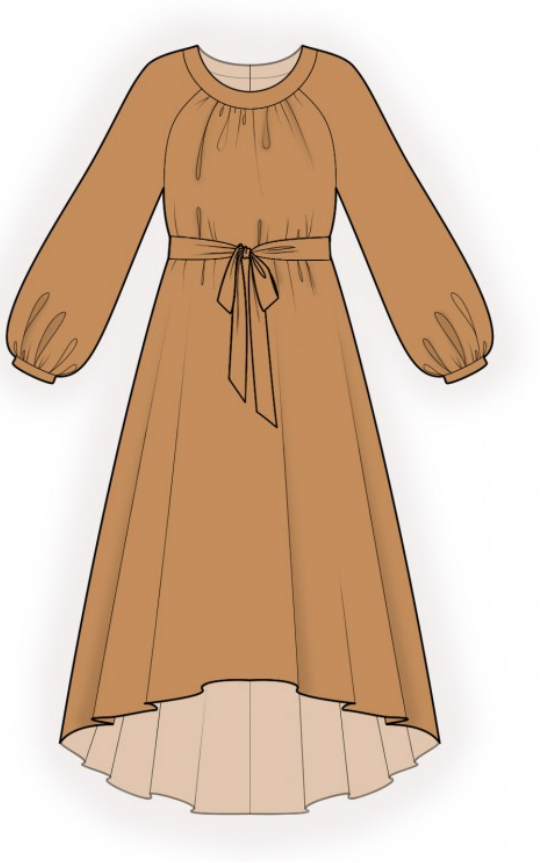

О припусках на швы::
- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.
- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:
Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

РАСКРОЙ:

Обратите внимание при раскрое:
Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроятся со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.
При стачивании деталей, обращайте внимание на надсечки, они должны совпадать.

Main fabric:
1. Back - cut 2
2. Front – cut 1 on fold
3. Sleeve – cut 2
4. Cuff – cut 2
5. Neckline facing — cut 2
6. Belt – cut 1

Fusible interfacing:
1. Cuff – cut 2
2. Neckline facing – cut 1

Инструкции:

1. Apply fusible interfacing.

2. Serge the center back edges separately. Sew center back seam from the marking for slit down to the lower edge. Press the seam apart. Sew a decorative stitch along the slit at 0.1-0.2 cm from the edge.

3. Sew a gathering stitch along upper edge of front and gather fullness.

4. Cut slit on sleeve along the marked line. Cut bias tape from main fabric (or take ready), its width should equal 4 cm and length should equal two lengths of slit +4 cm. Fold bias tape in half lengthwise and press. Press outer seam allowances towards center. Sew bias tape to slit of sleeve (pin bias tape to slit edge from the right side and sew, fold bias tape onto wrong side and topstitch onto garment along fold line).

5. Sew sleeves to back, press towards the back and serge. Sew sleeves to front, press towards front and serge.

6. Sew side seams processing the sleeve seam at the same time, serge and press.

7. Cut (or take ready) bias tape, its width should equal 2.5 cm and its length should equal 5 cm for loop buttonhole. Fold tape in half lengthwise right sides together and stitch at 0.3 cm from fold. Cut away seam allowances close to seam, turn tape right side out and straighten the rolled piece. Adjust length of the loop.

8. Pin neckline facings together, right sides together, and sew along neckline edge and center back seam, inserting the loop buttonhole. Clip into curves, turn right side out and press. Sew the outer facing into neckline, press seam allowance towards facing. Fold under the seam allowance of the inner side inside at 1 cm and topstitch into seam of.

9. Pin cuffs together, right sides together and sew side edges. Start and stop stitching exactly at the marked line of the cuff seam. Turn the piece right side out, press. Sew a gathering stitch along lower edge of sleeve and gather fullness. Sew outer side of cuff to sleeve, fold the seam allowance of the inner cuff inward and stitch in the seam attaching the outer cuff.

10. Serge the lower edge of garment. Press onto wrong side and topstitch.

11. Make buttonholes on cuffs, sew on buttons. Sew on button onto the left side of facing.

12. Fold belt in half lengthwise right side down and sew along the edges, leaving an opening for turning. Turn belt right side out and press. Sew the opening closed.

Технический рисунок:

