
Dress With Contrasting Inset - Выкройка #2408

Recommendations on fabric: natural/mixed knit fabric of small stretchiness in contrasting or similar color.

You will also need: knit fusible interfacing; 1 button.

Seam allowances: all seams 1 cm; seam allowance for hem of garment – 2.0 cm. Seam allowance along the upper edge of collar – 0 cm.

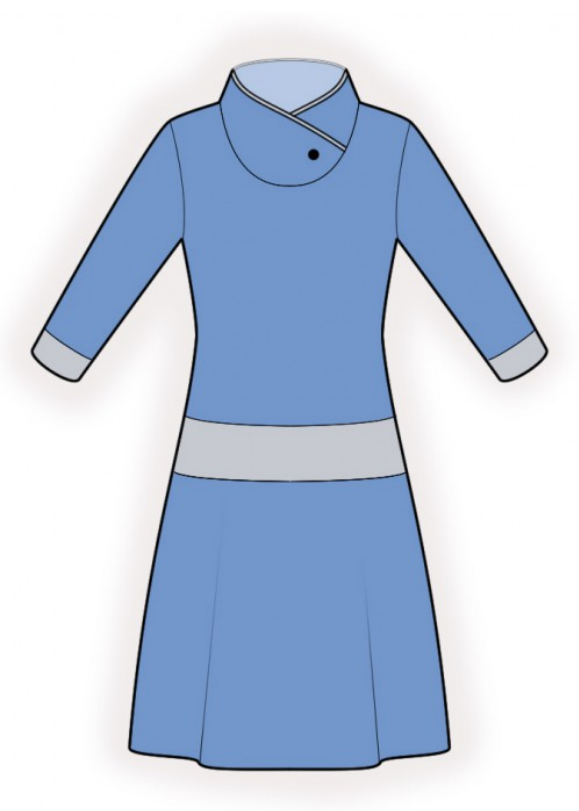

О припусках на швы::
- Если на выкройке двойной контур, припуски на швы уже включены. Они составляют 1 см, если не указано иначе.
- Если у выкройки одинарный контур, припуски на швы не включены, и должны быть добавлены при раскрое.

О требуемой длине ткани:
Внимание! В инструкциях не указано необходимое количество ткани, так как оно зависит от ширины и рисунка ткани, а также Ваших размерных признаков. Прежде всего, распечатайте лекала и разложите их на ширине, соответствующей ширине ткани, которую Вы хотите использовать (обычно от 90 до 150 см), чтобы определить, сколько ткани Вам потребуется. Не забывайте учитывать парные детали и детали со сгибом.

О работе с эластичными тканями:
Детали выкройки из трикотажа стачиваются специальным эластичным швом или швом зигзаг. Припуск на подгибку низа может быть настрочен двойной иглой для сохранения эластичности. Детали также можно стачать при помощи оверлока. При стачивании оверлоком, пожалуйста, обрежьте припуски на швы до ширины 0.6 - 0.8 см.

РАСКРОЙ:

Обратите внимание при раскрое:
Обратите внимание на обозначение долевой нити при раскладке деталей. Некоторые детали кроятся со сгибом. Это указано на лекале. Перенесите все отметки и другие особенности дизайна (вытачки и т.п.) с лекала на ткань.
При стачивании деталей, обращайте внимание на надсечки, они должны совпадать.

Main fabric:
1. Upper back - cut 2

2. Lower back - cut 1 on fold
3. Upper front - cut 1 on fold
4. Lower front - cut 1 on fold
5. Collar - cut 2 on fold
6. Sleeve - cut 2

Main fabric 1:
1. Back inset - cut 1 on fold
2. Front inset - cut 1 on fold
3. Cuff - cut 2

Fusible interfacing:
1. Collar - cut 1 on fold

Инструкции:

1. Apply fusible interfacing to outer collar.

2. Sew darts on front, press bulk towards top. Sew center seam on upper back, press seam allowances towards left and serge.

3. Sew shoulder seams, press towards the back and serge.

4. Pin together collars wrong sides together and baste together along edges. Cut a bias tape from Main Fabric 1 , its width should equal 4 cm and its length should equal the length of the upper edge of collar + 4 cm. Finish the upper edge of collar with bias tape, press the piece. Pin right side of collar onto the left side and baste together. Sew collar into neckline, serge and press.

5. Sew back inset to upper back, press seam allowances towards top and serge. Sew lower back to back inset, press seam allowances towards top and serge.

6. Sew front inset to upper front, press seam allowances towards top and serge. Sew lower front to front inset, press seam allowances towards top and serge.

7. Sew side seams, press towards the back and serge.

8. Sew sleeve seam, press towards the back and serge. Sew sleeves into armholes, matching notches, serge and press.

9. Sew cuff into a ring, press the seam apart. Fold cuff in half lengthwise and press right side out. Sew the cuff to the sleeve, press seam allowances towards sleeve and serge.

10. Serge bottom edge of garment, press onto wrong side and topstitch.

11. Sew on a button at collar, fixing together the right part and the left part.

Технический рисунок:

